

[www.fishman.com](http://www.fishman.com)

***FISHMAN***

**USER GUIDE  
SONITONE™**

## Controls

---

**Plug In** • Connect the Sonitone to your amplifier or PA with a ¼-inch instrument cable. To conserve battery life, remove the instrument cable from the guitar when the system is not in use.


**Volume** • For the cleanest noise-free sound, set the volume as high as possible without causing your amp or mixer to distort.

**Tone** • Turning the Tone control counter-clockwise reduces the amount of treble in your sound.

## Battery Replacement

---

You can expect approximately 100 hours of continuous use between battery changes. To replace the battery in most systems, remove the fabric battery bag that is mounted inside the instrument. 9 Volt alkaline or lithium batteries are suggested for optimal performance.

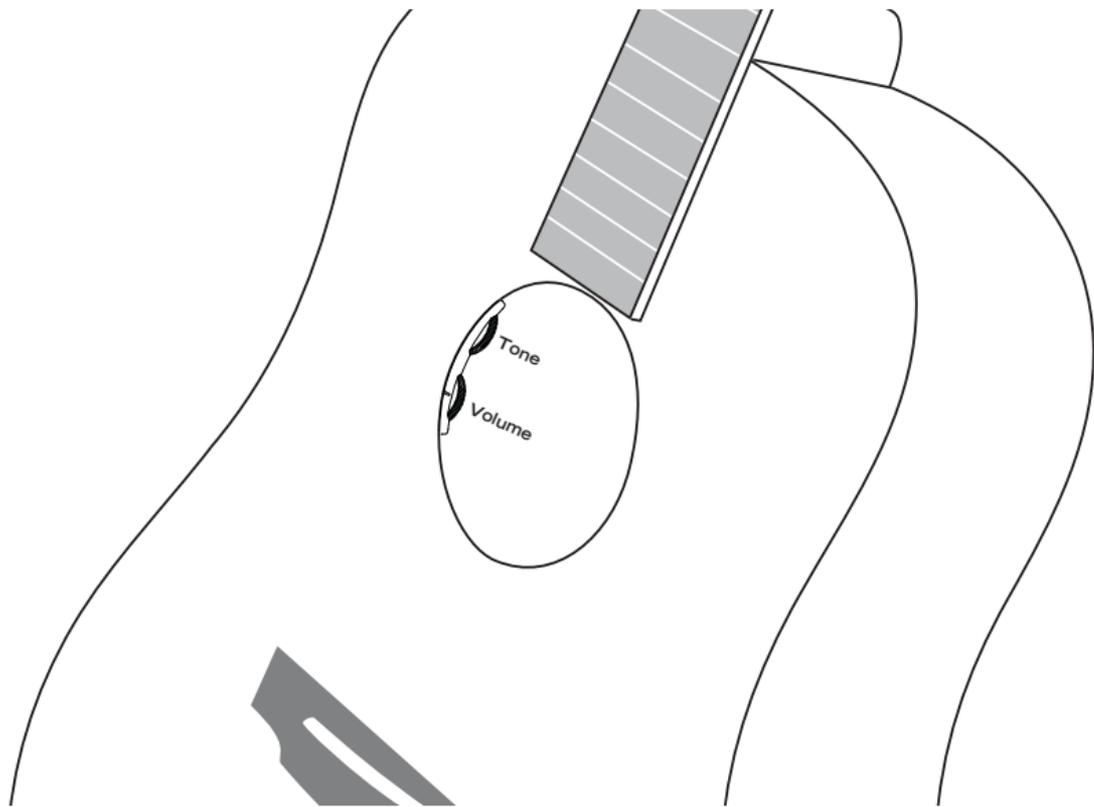

***FISHMAN***

[www.fishman.com](http://www.fishman.com)