

www.fishman.com

FISHMAN

**USER GUIDE
MATRIX VT**

Controls


Plug In • Connect the Matrix VT to your amplifier or PA with a ¼-inch instrument cable. To conserve battery life, remove the instrument cable from the guitar when the system is not in use.

Volume • For the cleanest noise-free sound, set the volume as high as possible without causing your amp or mixer to distort.

Tone • Turning the Tone control counter-clockwise reduces the amount of treble in your sound.

Battery Replacement

You can expect approximately 250 hours of continuous use between battery changes. To replace the battery in most systems, remove the fabric battery bag that is mounted inside the instrument. 9 Volt alkaline or lithium batteries are suggested for optimal performance.

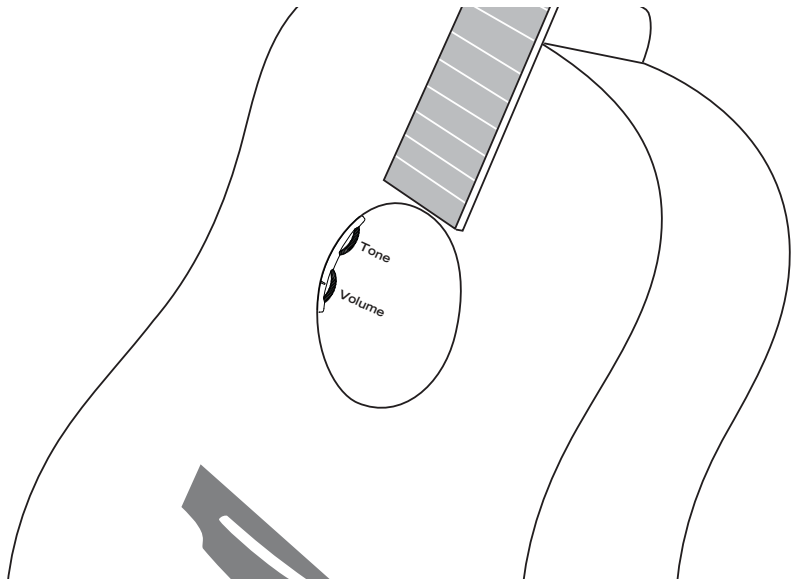

FISHMAN

www.fishman.com